




### **Features**

- Variable large diaphragm microphone
- Pressure-gradient transducer with double membrane capsule
- Five directional characteristics: omni, wide angle cardioid, cardioid, hypercardioid, figure-8
- Thereby most versatile in all recording situations
- Two-stage roll-off filter
- Switchable 10 dB preattenuation
- Extended frequency range in comparison to U 87 Ai

he U 89 is a studio microphone for universal applications. The headgrille protects a dual-diaphragm capsule. A rotary switch be-

low the headgrille selects from five different polar patterns. Therefore the microphone can be adapted easily to large sound sources, and those that are spread wide apart, or to sound sources to be recorded at a greater distance.

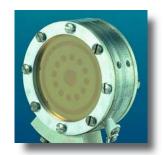

The amplifier accepts sound pressure levels up to 134 dB without distortion. This figure

can be increased to 140 dB. An additional rotary switch activates a filter that changes the low frequency response either below 80 Hz or 160 Hz.

# **Applications**

The U 89 i is similar in appearance to the U 87. It is of smaller size, and lighter weight. It features five instead of three directional characteristics and a higher maximum sound pressure level which make this microphone easier adaptable to different applications.

## Polar patterns

In addition to the usual directional polar patterns: omnidirectional, cardioid, and figure-8, we have added a hypercardioid and wide-angle cardioid characteristic.

When compared to the standard cardioid pattern, the hypercardioid characteristic suppresses sound from the side more efficiently. The wide-angle polar pattern is especially useful to record large sound sources.

# **Acoustic features**

The microphone is addressed from the front, marked with the Neumann logo. The large diaphragm capsule has a very smooth frequency response for all polar patterns over a wide acceptance angle. The frequency response curves are flat up to  $10~\rm kHz$  within a pickup angle of  $\pm~100^\circ$ .

As a result the U 89 i has a very even diffuse-field response for all polar patterns. This is important in a reverberant environment when more reflections arrive at the microphone capsule. The acoustic information is not affected in its tonal quality when recorded by the microphone.

This characteristic is achieved without resorting to corrective resonance effects.

The capsule it is elastically mounted to avoid any structure borne noise that could interfere with its operation.

### Filter and attenuation

The amplifier handles sound pressure levels up to 134 dB without distortion.

With a self noise level of 17 dB (A-weighted)

the total dynamic range is 117 dB. Maximum sound pressure level is 140 dB when the –6 dB rotary switch is in the ON position.

A low frequency roll-off at 80 Hz or 160 Hz can be activated with the third rotary switch below the headgrille.



This filter suppresses low frequency interference, yet maintains an even frequency response

for close-up sound sources, for example, when proximity effect could adversely affect the program material.

A steep high-pass filter in the LIN position prevents the output transformer of the microphone from being overloaded



due to undesired subsonic frequencies.

# **Operational** safety

All exposed surfaces of the microphone capsule, including the diaphragms, are at ground potential. This technology makes them highly immune to electrical and atmospheric interference and contamination through microscopic dust particles.

# **Delivery Range**

Microphone U 89 i (mt) Wooden box

# Catalog No.

U	89	i	ni	006449
U	89	i mt	blk	006450

# Selection of Accessories

Battery supply, BS 48 i
Auditorium hanger, MNV 87ni006804 Auditorium hanger, MNV 87 mtblk006806
Elastic suspension, EA 89 Ani007195 Elastic suspension, EA 89 A mtblk007196
Stand mount swivel, SG 389 mt blk 006620
Popscreen, PS 20 ablk 008488 Windscreen, WS 89blk007197
Microphone cable, IC 4 mt (with stand mount swivel)blk 006557

A complete survey and detailed descriptions of all accessories are contained in the accessories catalog.

Meaning of color codes: blk = black, ni = nickel

## Application Hints

- A microphone for universal usage
- Use as spot mic for
- wind instruments,
- strings,
- piano

These are just some of the most common applications. We recommend additional experimentation to gain maximum use from this microphone.

### Technical Data

Acoustical operating principle Pressu	ıre gradient transducer
Directional patternOmnidirectional	al, wide angle cardioid,
cardioid,	hypercardioid, figure-8
Frequency range	20 Hz20 kHz
Sensitivity at 1 kHz into 1 kohm	8 mV/Pa
Rated impedance	150 ohms
Rated load impedance	1000 ohms
Signal-to-noise ratio, CCIR <sup>1)</sup> (rel. 94 dB SPL)	66 dB
Signal-to-noise ratio, A-weighted <sup>1)</sup> (rel. 94 dB S	PL)77 dB
Equivalent noise level, CCIR <sup>1)</sup>	28 dB

Equivalent noise level, A-weighted <sup>1)</sup>
Maximum SPL for THD 0.5% <sup>2)</sup>
Maximum SPL for THD 0.5% with preattenuation <sup>2)</sup>
Maximum output voltage800 mV
Dynamic range of the microphone amplifier (A-weighted) 117 dB
Supply voltage (P48, IEC 61938)48 V $\pm$ 4 V
Current consumption (P48, IEC 61938)
Matching connectorXLR3F
Weight
Dimensions

<sup>1)</sup> according to IEC 60268-1; CCIR-weighting acccording to CCIR 468-3, quasi peak; A-weighting according to IEC 61672-1, RMS 2) measured as equivalent el. input signal

